

● **FUNCTION**

FN + 1 =F1	FN + 2 =F2	FN + 3 =F3	FN + 4 =F4
FN + 5 =F5	FN + 6 =F6	FN + 7 =F7	FN + 8 =F8
FN + 9 =F9	FN + 0 =F10	FN + _ =F11	FN + += =F12

FN + M =Volume switch	FN + < =Volume down	FN + > =Volume plus
FN + J =pause / play	FN + K =previous song	FN + L =Next track
FN + U =Prtscc	FN + O =Pause	FN + Q =Home Page
FN + W =my computer	FN + E =mail	FN + R =music
FN + T =Calculator	FN + Y =Search	FN + I =ScrIk
FN + Home =inst	FN + Esc = `	FN + Esc + Shift = ~
Fn + Del =End		

Fn + Win =Win key lock / unlock (the blue light is on when the Win key is locked; the light is off when the Win key is unlocked)

Fn + backspace =turn the light on / off

Fn + \ | =Hardware lighting switch

Fn + space = long press for 3 seconds, the keyboard will restore the factory default settings (the current light on the keyboard flashes three times as a reminder)

Fn + ↑ =Increase the brightness of the light (the fourth gear is adjusted to the brightest ↑ key, the blue light flashes three times)

Fn + ↓ =The brightness of the light is weakened (the fourth gear is adjusted to the darkest, the keyboard light is off, and the blue light of the ↓ key flashes three times)

Fn + ← =The speed of the light effect becomes slower (the fourth gear is adjusted to the slowest, and the blue light flashes three times)

Fn + → =speed up the lighting effect (the fourth gear is adjusted to the fastest → button, the blue light flashes three times)

Fn + ; : =light effect to the left (only some lighting effects support)

Fn + ' " =lighting effect to the right (only some lighting effects support)

Please feel free to contact us if you meet any question when using our products.
customer@kemove.com



T68SE

MECHANICAL KEYBOARD

www.kemove.com



成品尺寸：宽 11.5cm * 高 19cm

出血尺寸：左、右、上、下 各0.3cm

说明书材质：300g 铜纸板 双面过哑胶