

FUNCTION

FN + Esc = `
FN + Shift + Esc = ~
FN + 1 = F1
FN + 2 = F2
FN + 3 = F3
FN + 4 = F4
FN + 5 = F5
FN + 6 = F6
FN + 7 = F7
FN + 8 = F8
FN + 9 = F9
FN + 0 = F10
FN + _ = F11
FN + = = F12
FN + U = Print Screen

FN + I = Scroll Lock
FN + O = Pause Break
FN + J = Insert
FN + K = Home
FN + L = Page Up
FN + M = Delete
FN + , < = End
FN + . > = Page Down
FN + Q = Home
FN + W = My computer
FN + E = Mail
FN + R = Multimedia player
FN + T = Calculator
FN + Y = Search
FN + A = Previous song

FN + S = Next song
FN + D = Play / Pause
FN + F = Play / Stop
FN + G = Volume Up
FN + H = Volume Reduce
FN + Backspace = Mute

FN + Tab = Reset to the factory default
(Press 3 seconds)

FN + WIN = WIN key lock / unlock
(WIN key turn off backlight
after locked,
Press again to unlock)

FN + Space = FN key lock / unlock
(FN key turn off backlight
after locked,
Press again to unlock)

FN + Z = Mac key layout
FN + X = Win key layout
FN + [{ = Decrease the brightness
of the light effect
FN +] } = Increase the brightness
of the light effect
FN + \ | = Switches the keyboard
built-in lighting effect
FN + ; : = Decrease the speed of
the light effect
FN + ' " = Increase the speed of
the light effect


FN + / ? = ↑ **FN + R-ALT** = ←
FN + R-Ctrl = → **FN + Menu** = ↓

www.kemove.com



Please feel free to contact us if you
meet any question when using our
products.

customer@kemove.com

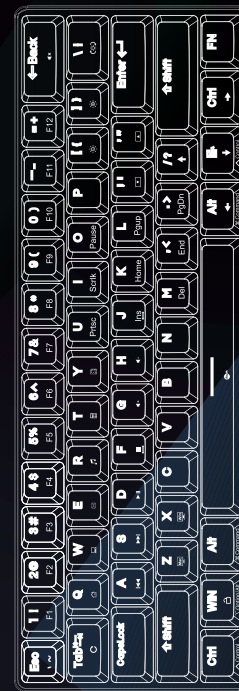

DK 61SE



MECHANICAL KEYBOARD
MANUAL

成品尺寸：280*103mm

说明书材质：300g 铜纸板 双面过哑胶