
 



KEMOVE K61SE

功能说明书

KEMOVE K61SE function instructions

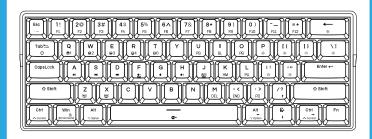



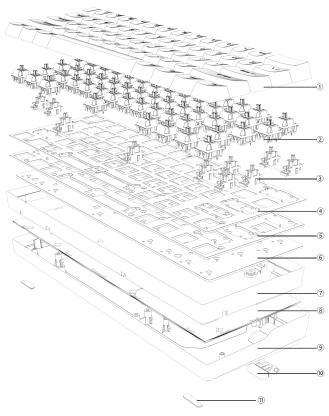

- ① PBT双色注塑键帽
- ④ 1.6mm双面喷粉定位板
- ⑦ 透明装饰框 Transparent dec
- ⑩ 亚克力透明脚撑
- ② 机械焊接轴体
- ⑤ 夹芯EVA消音垫 Sandwiched EVA Sound-dampening pads
- ⑧ 进口底部消音EVA
- ⑪ 亚克力透明脚垫
- ③ 高稳定精调卫星轴
- PCB
 Printed Circuit Board
- 9 底壳 Bottom shell



KEMOVE K61SE

FN组合功能键

FN Combination function key

播放/暂停 FN+A= ► ► II	FN+S= ▲	下一首 FN+D= ►
FN+F= 静音 ■×	FN+G= ^{音量减小}	FN+H= ^{音量增大} ● ● ● ● ● ● ● ● ● ● ● ● ●
FN+1!= F1	FN+2@= F2	FN+3#= F3
FN+4\$= F4	FN+5%= F5	FN+6^= F6
FN+7&= F7	FN+8*= F8	FN+9(= F9
FN+0)= F10	FN+ = F11	FN+=+= F12
插入字符开关键 FN+U= Print Screen		暂停键 FN+O= Pause
插入键 FN+J= Insert	起始键 FN+K= Home	向上翻页 FN+L= PageUp
删除键 FN+M= Delete	结束键 FN+,<= End	向下翻页 FN+.>= Page Do
FN+Esc= `~	灯光亮度加强 FN+{[= Increase the b	rightness of the light
关闭背 FN+Backspace= Turn	光,打开背光,关闭所有灯 off backlight,turn on ba	acklight, turn off all ligh
灯光亮度减弱 FN+P= The brightne	ess of the light is weak	ened
灯光速度加强 FN+"'= Speed up th	e lighting effect	
灯光速度减慢 FN+ ;: = The Speed	of the light effect beco	omes slower
切换驱动程序内自 FN+]}= Software light	a定义灯效 板载系统 switch FN+\ = Hardwa	
恢复键盘出厂设 FN+Tab= Restore the l	:置(按5秒) keyboard to factory sett	ings(Press 5 seconds)
win键锁定/解锁 FN+Win= Win key to lo	t ck∕unlock FN+Space •	FN键锁定/解锁 = FN key locked / unlock
配置层1 FN+Q= Profile 1	配置层2 FN+W= Profile 2	配置层3 FN+E= Profile 3
配置层4 FN+R= Profile 4	配置层0 FN+T= Profile 0	FN+?/= ↑

切换说明 / Reminder



FN + Z/X 切换键盘Mac/Win键位布局

FN + Z/X switch keyboard Mac/Win key layout.

如果您在使用我们的产品时遇到任何问题,请随时与我们联系 customer@kemove.com If you have any specific questions or need assistance related to theseproducts or features, feel free to ask customer@kemo